


USER GUIDE RIDE RIG

BOARD
RIDING
81
SINCE



Unpack your Fanatic Rig on a flat surface – grass is ideal.

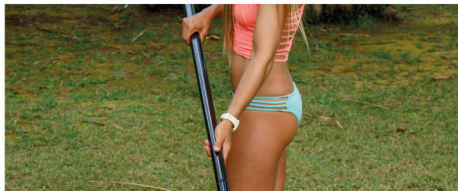

Connect the three pieces of your mast into one piece, with the narrow ending being the tip of the mast.



Insert the mast into the mastsleeve.



Insert the mastbase into the bottom of the mast.



Connect the rope at least two times through the downhaul ring on the bottom of the sail. Make sure the mast-top is in a fixed position in the top of the sail.



Pull the rope until the bottom of the sail is properly tensioned. Pushing your foot against the mastfoot while pulling the rope makes it easier to reach the required tension.

FANATIC

USER GUIDE RIDE RIG

BOARD
RIDING
81
SINCE



Place the front of the boom within the cutout of the mastsleeve – lower for small sailors, higher up for tall sailors.



When the mast is fixed inside the mounting of the boom front, pull the rope around the hook, fix it and lock it into the cleat. Close the lever to fix the boom. It has the right tension if it makes a „click“ sound while closing. If you can't close the lever, the rope is too tight. If it closes too easy, the rope needs more tension.



Put uphaul line around the mast foot to easily lift up your rig out of the water. Make sure the line is connected to the front end of the boom.



Adjust the boom length so the end piece is about 10cm longer than the clew of the sail. Connect the rope of the boom end through the clew ring of the outhaul two times.



Pull the rope until your sail is under tension and fix the rope in the cleat. If your sail is too loose, the boom should be longer. If the sail is tight and there is more than 2cm gap between the boom end and the clew, adjust the boom shorter. Wrap the remaining rope around the end piece of the boom and fix it, so it's not hanging off.



FANATIC