

PHOTO CREDITS: THOMAS MARZUSCH, THOMAS OSCHWALD, PHILIPP SIGMUND



## USER GUIDE

HOW TO ATTACH A CLICK FIN TO YOUR  
FANATIC POCKET SUP





## HOW TO ATTACH A CLICK FIN TO YOUR FANATIC POCKET SUP



**1** Flip the board over to attach the fins.



**2** Push the fin down to the fin box. The round pins on the fin base have to slide into the slots in the box.



**3** When the fin base is completely covered by the fin box, push the fin towards the tail of the board until it snaps in. That's it. You're done!



**4** To release the fin after your ride, push the fin towards the nose of the board before pulling it upwards out of the fin box.



**5** To provide extra security you can also tighten the screws on the side with an Allen key or FCS key. To release, untighten the screws and follow the same step as point 4.