



## USER GUIDE

SETUP YOUR FANATIC INFLATABLE








## HOW TO SETUP YOUR FANATIC INFLATABLE




1

Unpack and unroll your Fanatic Inflatable SUP on a flat surface - grass is ideal.

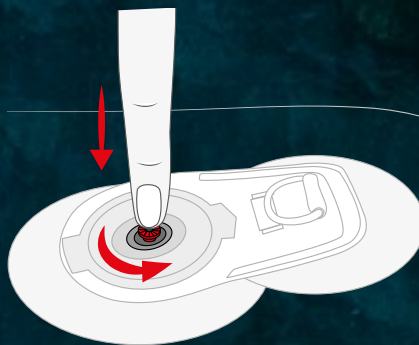


2

Make sure the valve of the board is in the outer/upper position. The valve must be released for inflation. To release the valve, push slightly downwards and twist to the right until you find the upper position.

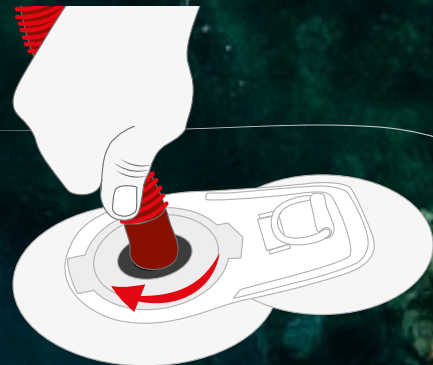


3

Connect the air hose with a twist to the pump and plug the end piece of the hose into the valve of the board. Turn it clock-wise for a safe connection.

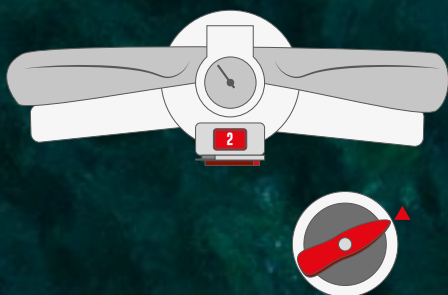


4

Start pumping with your Power Pump switched on double stroke action.

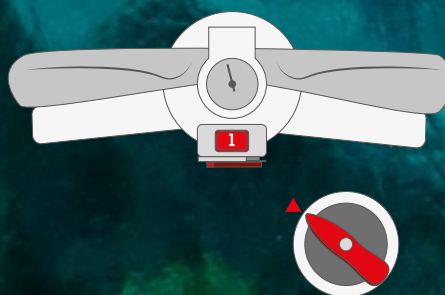

5

Pump up your board. If it gets too exhausting, switch to single stroke action, it's much easier to reach full pressure with single stroke action.

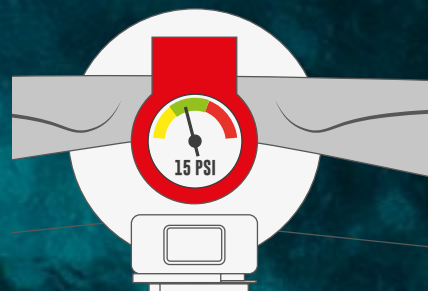


6

Pump until you reach 15 PSI minimum pressure, for more stiffness you can inflate up to 20 PSI.






## HOW TO SETUP YOUR FANATIC INFLATABLE

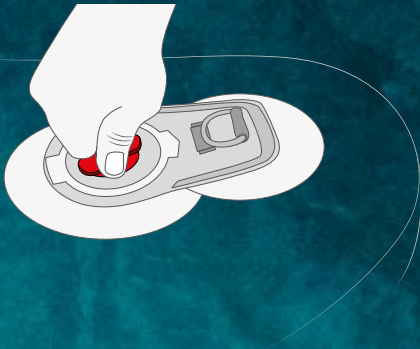


7

Place the cap on the valve and close it.

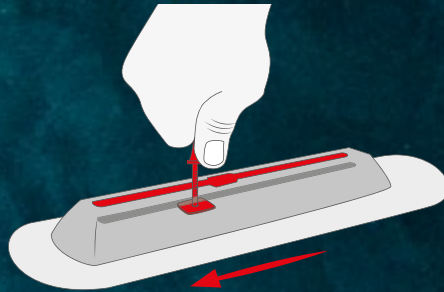


8

Flip the board over to attach the fin. Use the fin screw to place the little plate at the front of the fin box.

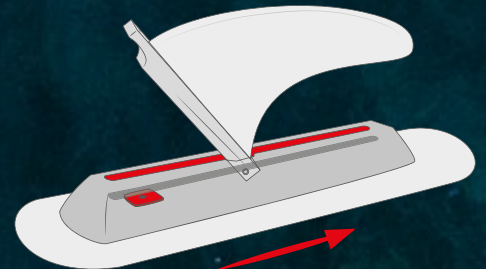


9

Insert the end of the fin base with the metal pin into the slot of the box and slide it backwards inside of the box, until you can push the front part of the fin base into the fin box.

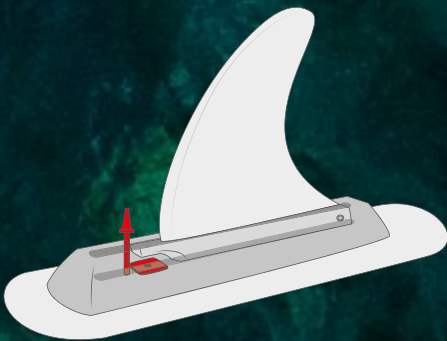

10

Use the fin screw to line up the plate hole with the hole in the fin base.

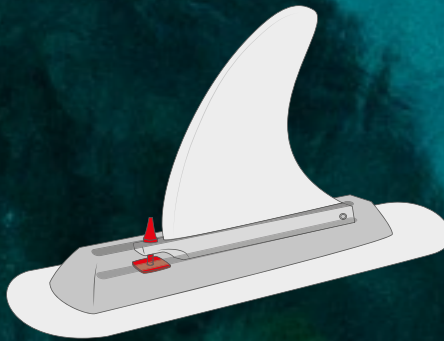

11

Connect the screw and the plate through the hole. No tools are needed, you're done!




12

Please have a look at our **HOW TO STAND UP PADDLE GUIDE** and see how to adjust your paddle and how to use your board on the water. Enjoy!






## HOW TO DEFLATE YOUR FANATIC INFLATABLE

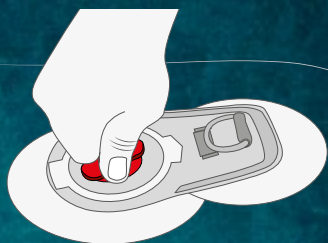

1

Open the cap on the valve to deflate.

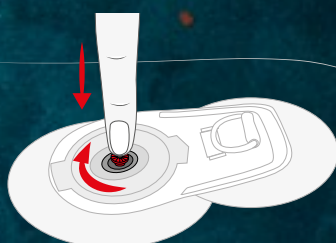

2

To deflate push the valve slightly downwards and twist to the left until you find the lower position.



3

Let your Fanatic inflatable deflate completely before you roll it up.

4

Tip – Change your valve to the upper position again after rolling/folding your iSUP, that will prevent to forget this part next time you inflate your Board.



Storage: The iSUPs can be stored inflated, however should not be left for prolonged periods in direct sunlight when not in use.

PHOTO CREDITS: MARCUS FRIEDRICH, RONNY KIAULEHN  
RIDER: LISA GERTENBACH, RICCARDO MARCA

ALL DATA SUBJECT TO CHANGE © FANATIC 2020  
FOR INTERNATIONAL DISTRIBUTION CONTACTS PLEASE CHECK:

WWW.FANATIC.COM  
BOARDS & MORE GMBH  
RABACH 1, A – 4591 MOLLN  
PHONE: +43 (0)7584 403-0