

# **USER GUIDE** SUP RIG

BOARD  
RIDING  
**81**  
SINCE



Unpack and unroll your Fanatic Rig on a flat surface – grass is ideal.



Connect the four pieces of your mast into one piece, with the narrow ending being the tip of the mast. Insert the mast tip into the mastsleeve.



Insert the mastbase into the bottom of the mast and connect the rope at least two times through the downhaul ring on the bottom of the sail. Make sure the mast-top is in a fixed position in the top of the sail.



Pull the rope until the bottom of the sail is properly tensioned.



Pushing your foot against the mastfoot while pulling the rope makes it easier to reach the required tension.



Connect the rounded front part with the two straight parts of the boom. Stick the parts together until the hole of the inside part is located under the push pin of the clip.



Close the clip and make sure that the pieces are properly connected.



Place the end piece of the boom into the tubes.

# FANATIC

# **USER GUIDE** SUP RIG

BOARD  
RIDING  
**81**  
SINCE



Place the boom around the sail.  
The front end of the boom has to be on the masts side.



Place the front of the boom within the cutout of the mastsleeve – lower for small sailors, higher up for tall sailors. When the mast is fixed inside the mounting of the boom front, pull the rope around the hook, fix it and lock it into the cleat.



Close the lever to fix the boom on the mast. It has the right tension if it makes a click sound while closing. If you can't close the lever, the rope is too tight. If it closes too easy, the rope needs more tension.



Put the uphaul line around the mast foot to easily lift up your rig out of the water.



Make sure the line is connected to the front end of the boom.



Thread the rope of your rear boom part through the lug in your sail's outhaul. Place the rope around the hook.



Pull the rope until your sail is under tension and fix the rope in the cleat. If your sail is too loose, the boom should be longer. If the sail is tight and there is more than 2cm gap between the boom end and the clew, adjust the boom shorter. Wrap the remaining rope around the end piece of the boom.



# FANATIC